


A.C. COMPRESSOR MOUNT 119L

Small Block Chevy - Long Water Pump
Driver's Side - Low Profile

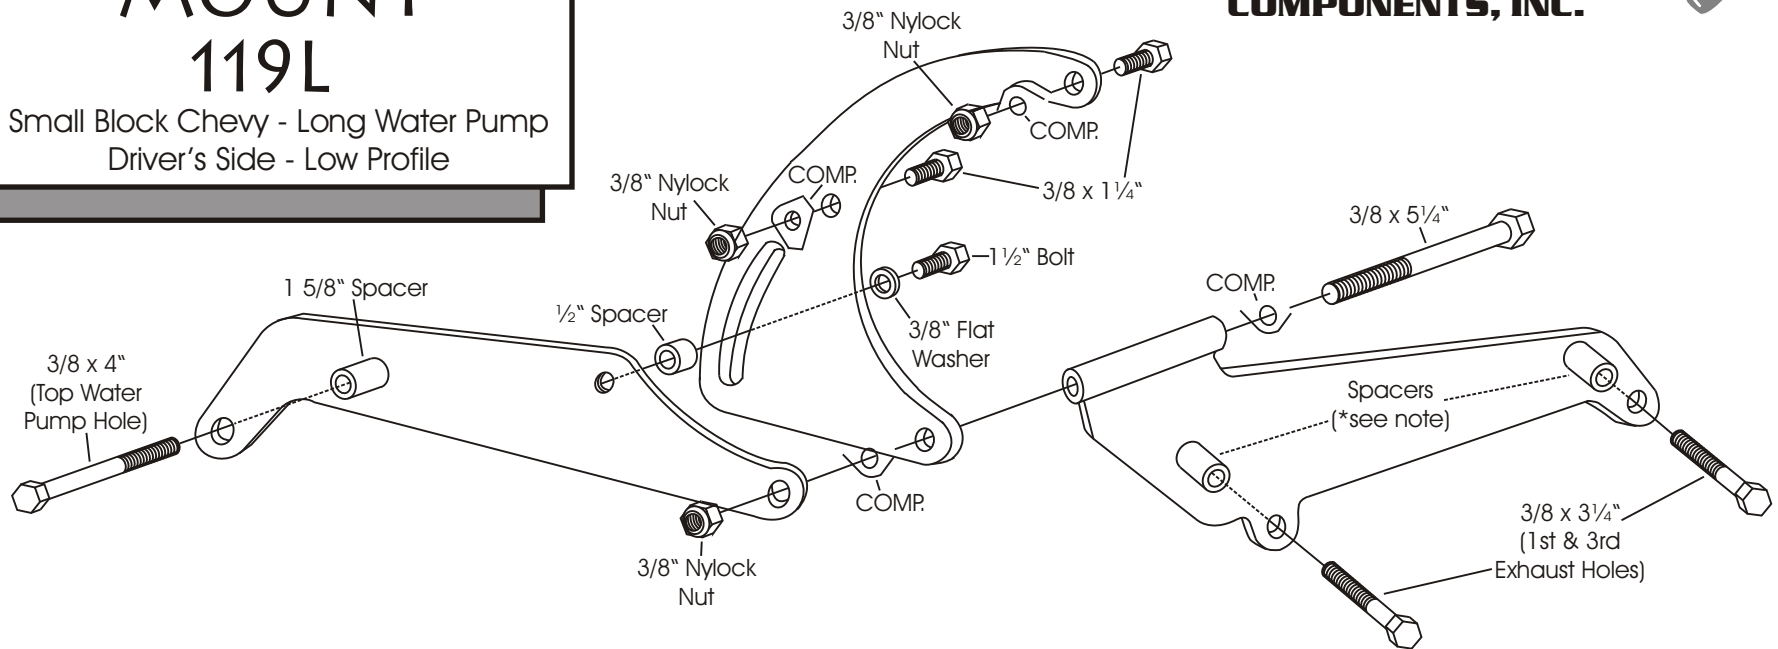

We use a belt length of 60-61" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

*NOTE: Exhaust Spacers with Headers use the 2 1/4" long x 5/8" O.D. spacers. With RAMS HORN MANIFOLDS use the 1/4" long x 3/4" O.D. spacer at the rear hole of bracket and a 1 1/16" long x 3/4" O.D. at front hole of bracket. With the later DROP-TYPE MANIFOLDS use the 1 1/16" long 3/4" O.D. spacers at both bracket holes. As with any mount system, assemble all of the brackets to engine BEFORE tightening the bolts.

It may be necessary to shorten the front exhaust spacer to work with the Factory Power Steering Adjustor.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

A.C.
COMPRESSOR
MOUNT
119L

Small Block Chevy - Long Water Pump
Driver's Side - Low Profile

ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053