


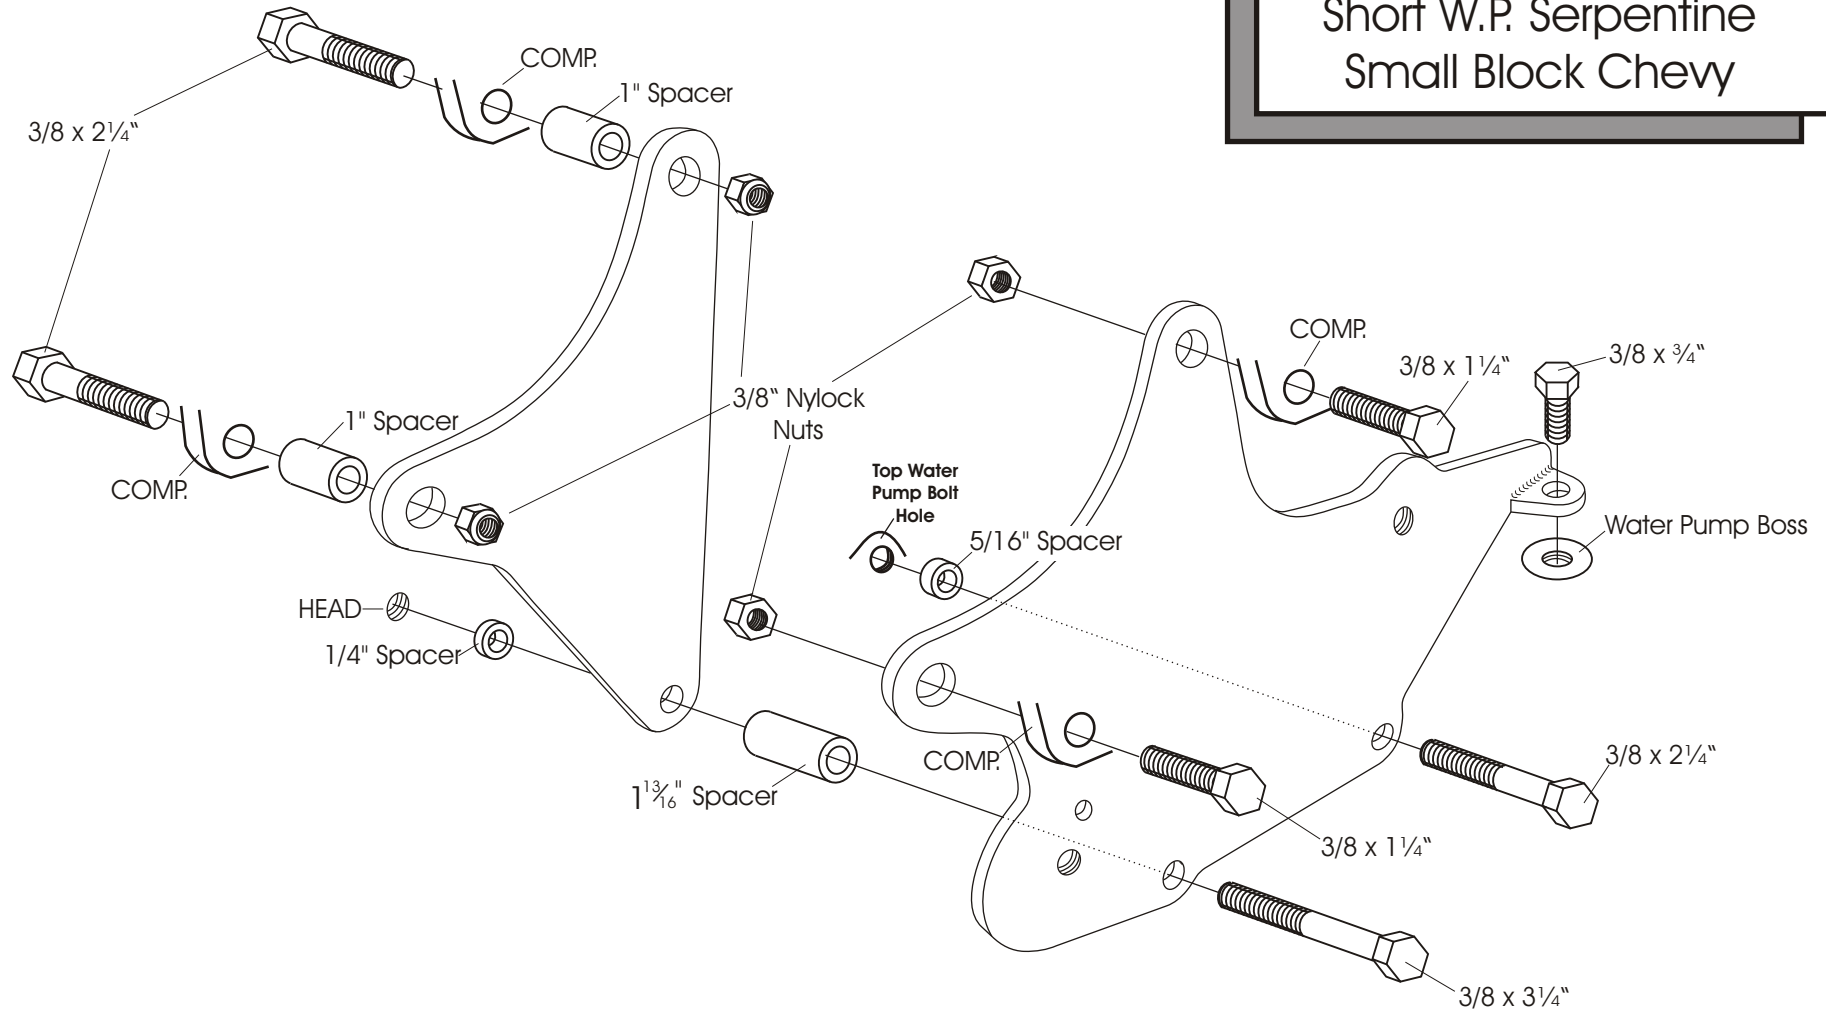

NOTE: When installing the mount, start all bolts and mount the compressor before tightening.

309 A.C.

A.C. Compressor Mount
Short W.P. Serpentine
Small Block Chevy



As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

309 A.C.

A.C. Compressor Mount
Short W.P. Serpentine
Small Block Chevy

ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053